


Mekanisk Hengevekt H-200 Brukermanual- English

THIS SCALE IS DESIGNED FOR STATIC UTS AND ARE NOT ALLOWED TO BE PART OF LIFTING EQUIPMENT.

- Weighing object should not be designed so it can cause any damage. For example, the size of the object can't be so big that it makes it difficult to put on and take off the scale hook.
 - Weighing object must be mounted in a safe way on the scale hook so the object can't fall and make damage to persons or material.
 - The device for hanging the scale must have the strength and design so the scale and its object can't fall and make damage to persons or material.
 - If the weight indicator does not return to "0", adjust with the knurled reset device located on the top of the scale.
- 
- Note! Adjust the scale only with the attached hanger / bowl.
 - Adjust / do not turn to the "end position", then the mechanics come off the scale house and repair may be required.
 - Before use, check that all screws, screw-nuts are tightened.

Periodic check of the above is recommended.