



TEST RESULT
2
MINUTES

SHELF LIFE
18
MONTHS

STORAGE
RT
+15°C to +25°C

Clean Do


Impex Produkter AS
Gamle Drammensvei 107, 1363 Høvik
www.impex.no, info@impex.no, Tel.: 22 32 77 20

... Clean Do

Swab for Protein detection

For prompt Protein Dirty Check.
It's a critical kit for your sanitation. Check invisible Protein Dirty by Kit's Color Change. You should do a complete test using Clean Do to prevent food poisoning.

It's getting more bacteria. If that place is cleaned enough not to grow bacteria, you might not have to care about that so soon. Complete cleaning leads to reduce a food poisoning risk. Color change into blue of this kit indicates that there are dirty at the place where you would rasp.

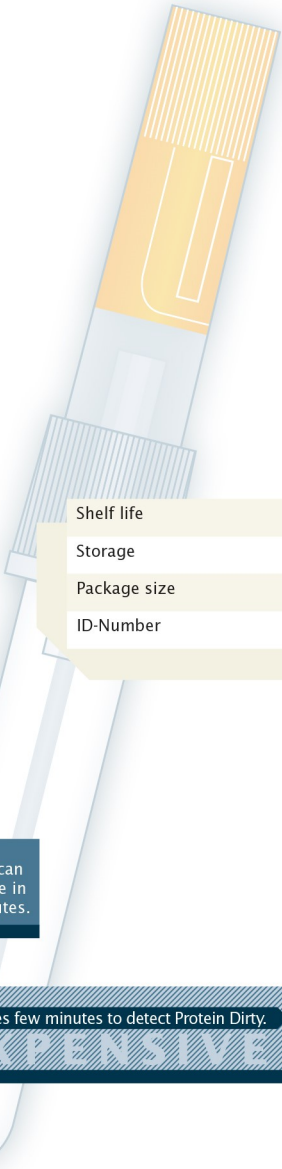

Clean Do	
Shelf life	12 month
Storage	+15 to +25°C
Package size	100 swabs/box
ID-Number	1 061 343


EASY! You can use this kit so easy. Not use any other equipments.

QUICK **2** You can judge in minutes.

NOT EXPENSIVE It takes few minutes to detect Protein Dirty.

■ ■ ■ ■ ■ **Clean Do Operation**

1
Put out the swab-part
from kit.

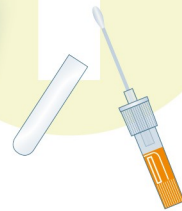


2
Rasp correctly targeted
place where you check.
When the swab is dry, you
water the swab a little.



3
Pullout »virgin-sealtape«
from the body.




4
Push »Reactive Cap« into
the below-side body.

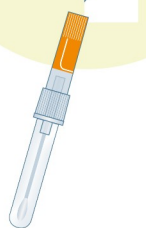

5
Turn »Reactive Cap«
a round.



6
Swing CleanDo a few
times to drop off liquid
contents.

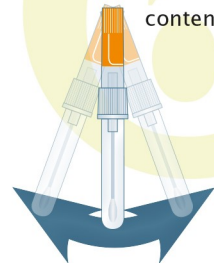

7
You can judge in 2 minutes.
Compare with the color-
change sample.



(-) (+) (++)
Negativ Positiv Strong Positiv

Impex Produkter AS
Gamle Drammensvei 107
1363 Høvik
www.impex.no
info@impex.no
Tel.: 22 32 77 20