



ChemLogic® CLPx

Portable Colorimetric Gas Monitor

Operating Manual

© DOD Technologies, Inc.
675 Industrial Drive Bldg. A.
Cary, IL 60013
solutions@dodtec.com
Phone 815.788.5200 • Fax 815.788.5300
DODtec.com

EC DECLARATION OF CONFORMITY
EU DECLARATION OF CONFORMITY

DOD TECHNOLOGIES INC.
675 Industrial Drive – Bldg. A
Cary, IL 60013
USA

Name and address of the company established in European Community and authorized to compile the Technical File:

ACC – Services Contact
78 Allee Primavera
Centre Ubidoca 2402
74370 Annecy
France

DOD TECHNOLOGIES INC. declares under our sole responsibility that the product described as:

Equipment Name: ChemLogic
Equipment Description: Portable Gas Monitor
Model: CLPx
Serial number(s): _____

Complies with the requirements of the following European Directives:

Low Voltage Directive (LVD) 2014/35/EU.
Electromagnetic Compatibility Directive 2014/30/EU.
RoHS Directive 2011/65/EU.

Main standards considered:

EN 61010-1: 2010+A1:2019.
EN 61326-1:2013.
EN IEC 63000: 2018.

Name of authorized company representative:

Mr. Danny O'Donnell
Chief Technical Officer and Co-CEO
DOD Technologies, INC

Danny O'Donnell

Date: 09/01/21 At:
Cary, Illinois USA

Table of Contents

Chapter 1 – Overview	7
1.1 Introduction.....	7
1.2 Sampling and Monitoring	7
1.3 Flow	7
1.4 Electrical.....	7
1.5 Theory of operation	7
Chapter 2 – Features	8
2.1 External Layout	8
2.1.1 Cassette Access Door	9
2.1.2 Keypad & Display	9
2.1.3 ChemLogic tape and Take-up Reel	9
2.1.4 Gas Inlet/Exhaust	9
2.1.5 Power	9
2.2 Micro Secure Digital (SD) card.....	9
2.3 Additional Options	10
2.3.1 Exhaust Option (Order P/N 2-700-003).....	10
2.3.2 Sampling Wand (Order P/N 2-700-007)	10
2.3.3 Pyrolyzer Option (Order P/N 2-700-013).....	10
Chapter 3 – What's Included	10
3.1 Unpacking the CLPx Case	10
Chapter 4 – Setup & Configuration	11
4.1 Battery Charging	11
4.2 Battery Replacement	12
Chapter 5 – Basic Operation	13
5.1 Using the keypad	13
CLPx Menu Overview	15
5.2 Main Menu.....	15
5.2.1 Analysis.....	16
5.2.2 Setup Menu	17
5.2.3 SD Card.....	17
5.2.4 History	17
5.2.5 STEL.....	18
5.2.6 Verify Tape	18
5.2.7 Service.....	18
5.2.8 Help.....	19
5.2.9 Power Off.....	19
5.3 Setup Menu	19

5.3.1 Select Gas	19
5.3.2 Adjust Flow	19
5.3.3 Set Alarm Levels	20
5.3.4 Battery Check.....	20
5.3.5 Set Date/Time.....	21
5.3.6 System Info	21
5.3.7 Cal Stick Test.....	21
5.4 Service Menu.....	21
5.4.1 Manual Optics Test	22
5.4.2 Auto Optics Test	22
5.4.3 Config Settings	23
5.4.4 Config Settings 2 (PWD settings on older versions).....	23
5.4.5 Battery Settings	24
5.4.6 Simulation	24
5.4.7 Passwords.....	24
5.4.8 Factory Menu	24
5.4.9 Software Update (Version 12.3 and Higher).....	25
5.5 Cassette Installation and Removal	25
Chapter 6 – Maintenance.....	27
6.1 Micro Secure Digital (SD) Card Replacement.....	27
6.2 Routine Maintenance.....	27
6.2.1 Inspection of the CLPx	27
6.2.2 Cleaning the CLPx.....	27
6.2.3 Cleaning the Exterior	28
6.2.4 Cleaning the Interior	28
6.2.5 Cleaning the Gate	28
Chapter 7 – Service & Support.....	29
Appendix A – Cassette Expirations	30
Appendix B – Options / Accessories / Spare Parts	31
Appendix C – Technical Specifications.....	32
Appendix D – System Event Messages.....	33
Appendix E – Gas Specifications.....	35
Appendix F – Removable Media	42
F.1 Concentration Log Files (CONCHH.CSV)	42
F.2 Event Log Files (EVENTHH.CSV).....	43
F.3 STEL Log Files (STELHH.CSV)	43
F.4 Formatting Micro SD Disks	44
F.5 Software Update Procedure.....	44

F.5.A CLPx Installer Update.....	44
F.5.B CLPx Software Update.....	45
Appendix G – ChemLogic® Cassettes.....	46
Appendix H – Pyrolyzer Option.....	47

IMPORTANT:

Be sure to read this manual in its entirety before installing and operating the CLPx. Contact the manufacturer with any questions regarding the installation or use of the CLPx.

Read [Appendix G](#) before handling ChemLogic Cassettes.

**ELECTRICAL HAZARD:**

The CLPx may only be serviced by trained service personnel. Contact our service department for more information.

Chapter 1 – Overview

1.1 Introduction

WARNING:

Operation of the ChemLogic® Portable Next Generation gas detection system without a manual in the native language in its country of operation is illegal. A translated copy of the manual should be requested immediately from DOD Technologies and before installation of the device. Failure to do so may result in severe injury.

Contact:

Phone: +1 815-788-5200

email: solutions@dodtec.com

The DOD Technologies CLPx portable gas monitor is an analytical instrument designed to measure low concentrations of a specific toxic gas or a specific range of related toxic gases or vapors. This equipment is intended to be used as part of a defined air quality management program.

The CLPx uses DOD Technologies ChemLogic® colorimetric technology for fast and accurate gas detection. The CLPx provides a fast response to a wide range of gases. It was designed for maximum uptime, so routine maintenance and service can be performed quickly and easily.

1.2 Sampling and Monitoring

The system draws sample flow through the inlet on the front of the unit and through the ChemLogic® Cassette.

1.3 Flow

An optional kit allows a short exhaust tube to be used with the CLPx unit. Contact DOD for more information.

1.4 Electrical

The unit is powered with a 6Volt rechargeable Lead Acid Battery. Use only the included charger to charge the unit.

1.5 Theory of operation

During the analysis cycle the pump draws a measured sample of air through a chemically impregnated “ChemLogic” paper tape. The ChemLogic Cassette reacts to the presence of the specific contaminants by darkening from its original paper color. Light is bounced off the dark stain and sensitive optics repeatedly measure the degree of change from the original color. The CLPX uses an advanced optical detection system to measure the light level reflected from the ChemLogic Cassette. The instrument calculates the change as the level of gas present in the sample. Extremely small concentrations can be detected with this method. The

instrument stores the gas level readings on the MicroSD card for transfer to a computer for further analysis in standard comma separated values (CSV) format.

If the calculated value indicates that the concentration has exceeded either the Low or High ALARM set points, the instrument will sound an ALARM and flash the concentration level in the backlit display. The CLPx automatically calculates the Short-Term Exposure Limit (STEL) for the selected gas and stores the readings in the internal data storage memory and to a MicroSD flash memory card (if installed).

The ChemLogic paper tape is contained within a removable tape cassette. The CLPx monitor automatically advances the roll to position a fresh segment of tape for gas sampling. Each cassette is sealed into a protective package and marked with expiration date and serial number. Cassette life will vary depending the operational conditions and concentration levels of the gas being monitored.

IMPORTANT: Use only ChemLogic Cassettes labeled for use with CLPx.

Chapter 2 – Features

2.1 External Layout



Figure 2.1

2.1.1 Cassette Access Door

The cassette access door is used to load/unload ChemLogic cassettes into the CLPx. To open the door, turn the door latch release knob counter-clockwise until it stops which will release the latch from the door. Pull the door down to insert/remove the cassette. When complete close the door and turn the knob clockwise to latch the door.



Figure 2.2

IMPORTANT: The door should remain closed and latched except when changing the ChemLogic cassette.

2.1.2 Keypad & Display

The CLPx uses a two-color LCD display with a 5-button keypad see Chapter 5 for a complete description on the use of the keypad and display.

2.1.3 ChemLogic tape and Take-up Reel

ChemLogic paper tapes are accessed by opening the door as described in section 2.1.1.

2.1.4 Gas Inlet/Exhaust

Sample is pulled through the inlet on the front of the unit, through the paper tape and further scrubbed via a charcoal filter inside the unit.

2.1.5 Power

Power the unit on by pressing the enter button. See chapter 5 for complete operation.

2.2 Micro Secure Digital (SD) card

The CLPx uses a MicroSD card to store historical information including concentration logging, event history, STEL and configuration information. SD cards may be purchased through DOD Technologies – see Appendix A.

Care should be taken when inserting and removing the MicroSD card. Do not insert or remove the MicroSD card while the machine is in operation. Power down the machine first then insert or remove the MicroSD card to assure no data is lost or the card is corrupted.

Standard MicroSD cards may be used with either FAT16 or FAT32 format. See Appendix F for information on the data stored to the MicroSD card.

2.3 Additional Options

2.3.1 Exhaust Option (Order P/N 2-700-003)

Adds an external exhaust port on the side of the CLPx to allow exhaust tubing to be added to exhaust the sample gas to an exhaust hood, etc.

2.3.2 Sampling Wand (Order P/N 2-700-007)

Adds a sampling wand with 5' of tubing to a fitting which can be connected / disconnected from the inlet port for sampling further from the unit such as detecting leaks around gas cylinders or fittings.

2.3.3 Pyrolyzer Option (Order P/N 2-700-013)

Adds pyrolyzer heating element to the exterior of the device. Item can be ordered as a field upgrade or factory upgrade. Contact your DOD Technologies regional sales manager to see full gas list of pyrolyzer ready gases. See Appendix H for installation and setup of the pyrolyzer device.

Chapter 3 – What's Included

3.1 Unpacking the CLPx Case

The CLPx comes in a convenient durable hard-shell storage case with a handle for easy transport. Included in the case are:

- A 0-500cc flow meter with a short tube for use when adjusting the pump to verify proper flow at any time during sampling.
- A battery charger with a charging indication light
- A shoulder strap with two rings to attach to the CLPx

The case can also hold a ChemLogic cassette. Be sure to read the DOD Technologies recommended storage guides for the specific types of cassettes being used.

Use care when handling the CLPx portable gas monitor. Although the CLPx monitor is ruggedly built it is a sensitive instrument. Do not drop the monitor or expose it to excessive moisture or heat that could cause damage to the mechanism or electronics.

Establish a schedule for cleaning and regularly inspect the unit for damage. If any damage is found or the monitor does not operate as described in these instructions, remove the unit from service and tag for repair by authorized personnel.

Chapter 4 – Setup & Configuration

Follow this checklist to configure the CLPx for first time operation.

Quick Setup Checklist

1. ___ Set system date and time (section 5.3.e)
2. ___ Gas selection (section 5.3.a)
3. ___ Alarm level settings (section 5.3.c)
4. ___ Adjust Flow (section 5.3.b)
5. ___ Install new ChemLogic tape (section 5.5)
6. ___ Test the optical system (section 5.4.b)
7. ___ Install removable media (section 6.1)

Setup complete - Ready for monitoring.

WARNING: If the CLPx Monitor does not operate as described in these instructions, DO NOT use the monitor. Remove the unit from service and tag for repair by authorized personnel. Failure to confirm that the monitor is operating properly may result in exposing the user to a hazardous atmosphere which could result in serious injury or death.

4.1 Battery Charging

The Battery charger for the CLPx monitor is an electrical device that has not been evaluated for intrinsic safety as an ignition source. This device is not to be used in a potentially explosive atmosphere. Use of the CLPx or Battery charger in a flammable or explosive atmosphere may result in ignition of the atmosphere resulting in serious injury or death.

WARNING: Battery can EXPLODE, LEAK, or CATCH ON FIRE if directly exposed to high temperature, water, or fire, or if opened, disassembled, or tampered with. Failure to handle battery properly may result in serious injury.

WARNING: Dispose of damaged or defective batteries in accordance with federal, state, and local environmental regulations. DO NOT throw away batteries as ordinary trash. Failure to handle battery properly may result in serious injury.

To charge the CLPx plug the charger into a power source (120/230 VAC) and then plug the charging connector into the back of the battery pack. The charger has an indicator light that will glow RED while the unit is charging or GREEN to indicate the battery is fully charged. The unit will not be damaged by continued charging after the indicator light turns GREEN.

WARNING: DO NOT remove the battery from the CLPx monitor in a potentially explosive atmosphere. Removal of the battery in a flammable or explosive atmosphere may result in the ignition of the atmosphere, resulting in serious injury or death.

4.2 Battery Replacement

Battery removal is not normally necessary. To replace the battery or to install a backup battery follow these steps:

- Disconnect the battery charger (if connected)
- Place the CLPx monitor in a clean work area known to be free of potentially explosive gases or hazards.
- Verify that the unit is powered OFF (the display screen will be blank).
- Lay the instrument on one side.
- The battery pack is mounted to the base of the CLPx monitor with four (4) screws, one at each corner. Remove the screws with a 9/64" (3.5mm) Allen wrench.
- Carefully pull the battery away from the unit and make sure all four screws are disengaged from the case.
- Carefully unplug the two-pin connector attached to the main board on the CLPx.

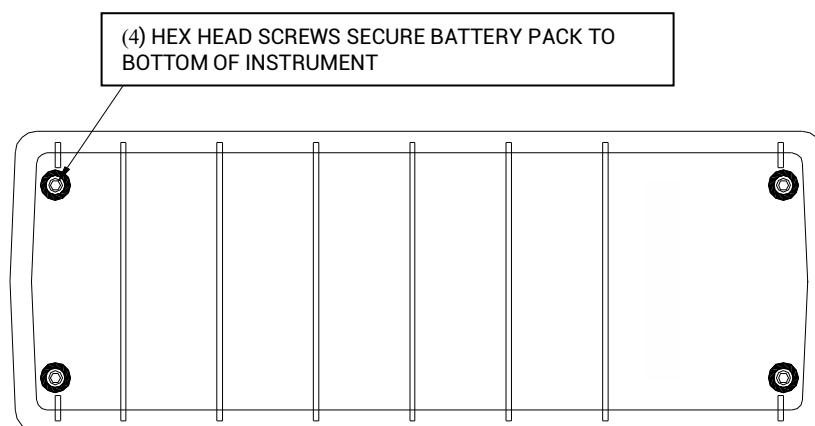


Figure 4.1

To reinstall the battery:

- Carefully reattach the two-pin connector to the main board making sure the latch snaps to hold it in place.
- Align the battery against the case with the charging port on the back of the CLPx.
- Securely tighten the four screws holding the battery in place.

Chapter 5 – Basic Operation

5.1 Using the keypad

The CLPX is controlled using the 5-key keypad located under the display. All the display screens are accessed through a simple menu system as shown in figure 5.1

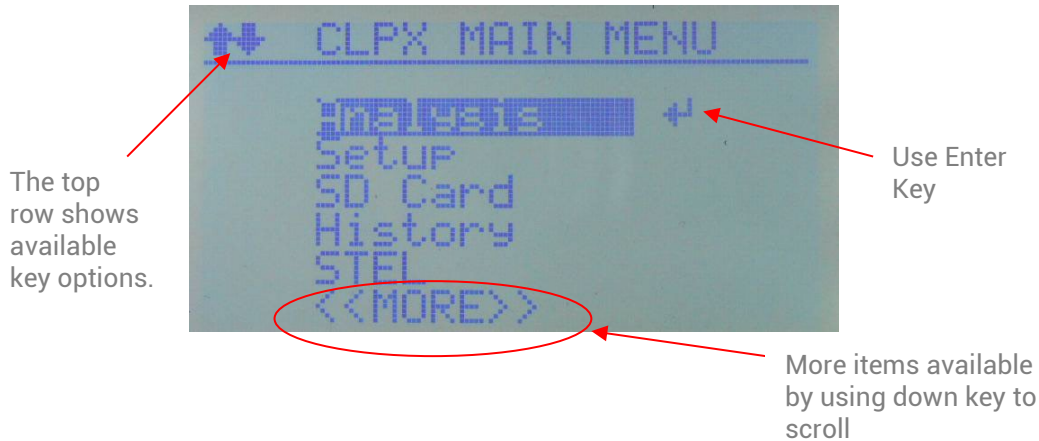


Figure 5.1

- A. On most screens the available keys will be shown on the display. Much of the time the top row indicates which keys to use.
- B. Menus – Use the UP/DOWN keys as shown in Figure 5.1 to navigate through the menu items then use the ENTER key to select the highlighted item. From any sub-menu (setup, service, etc.) use the LEFT key to return to the previous menu.
- C. Password – For access to restricted screens the system will prompt for the appropriate password.

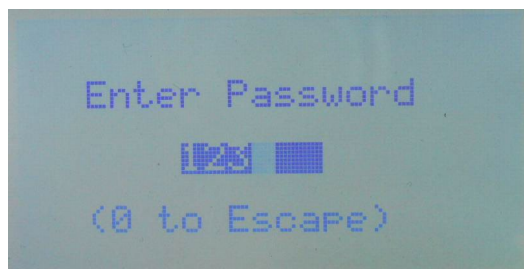


Figure 5.2

Use the LEFT/RIGHT keys to select each digit and the UP/DOWN to change the value of the selected digit. Press the ENTER key when complete to check the password. You can always change the value to 0 and press the ENTER key to return to the previous menu item.

- D. Normal data entry – Most data entry can be accomplished by simple use of the LEFT/RIGHT keys to select/change values as shown in figure 5.3

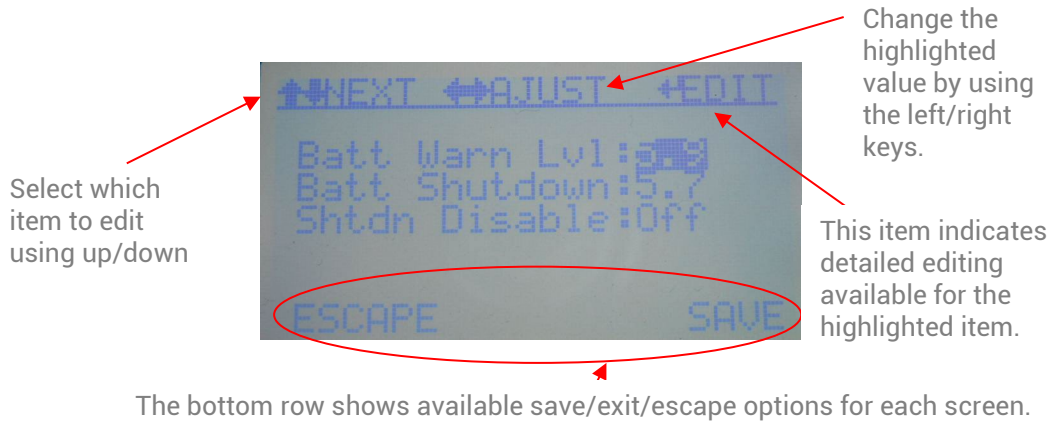


Figure 5.3

Some data items require detailed editing as shown in figure 5.3 When the 'EDIT' item appears on the top row for a highlighted value the operator can either use the LEFT/RIGHT to change the value or use the ENTER key to enter the value directly – see Detailed data entry below.

- E. Detailed data entry – When detailed data entry is selected a screen like Figure 5.4 will display allowing the operator to enter each digit as desired like password entry

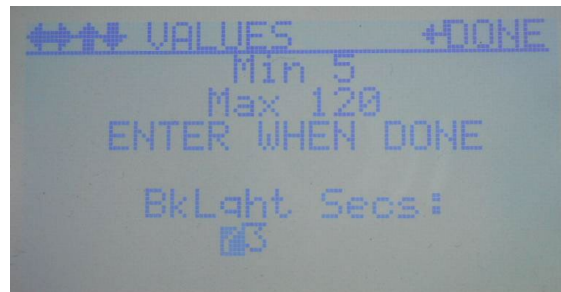



Figure 5.4

Use the LEFT/RIGHT keys to select each digit and the UP/DOWN to change the value of the selected digit. The minimum and maximum allowed values will be displayed. Press the ENTER key when complete to submit the new value and return to the previous data entry screen.

CLPx Menu Overview

5.2 Main Menu

Once the CLPx is configured the main menu contains all the screens necessary for normal operation. The main menu is not password protected. Each selection on the main menu is detailed below.

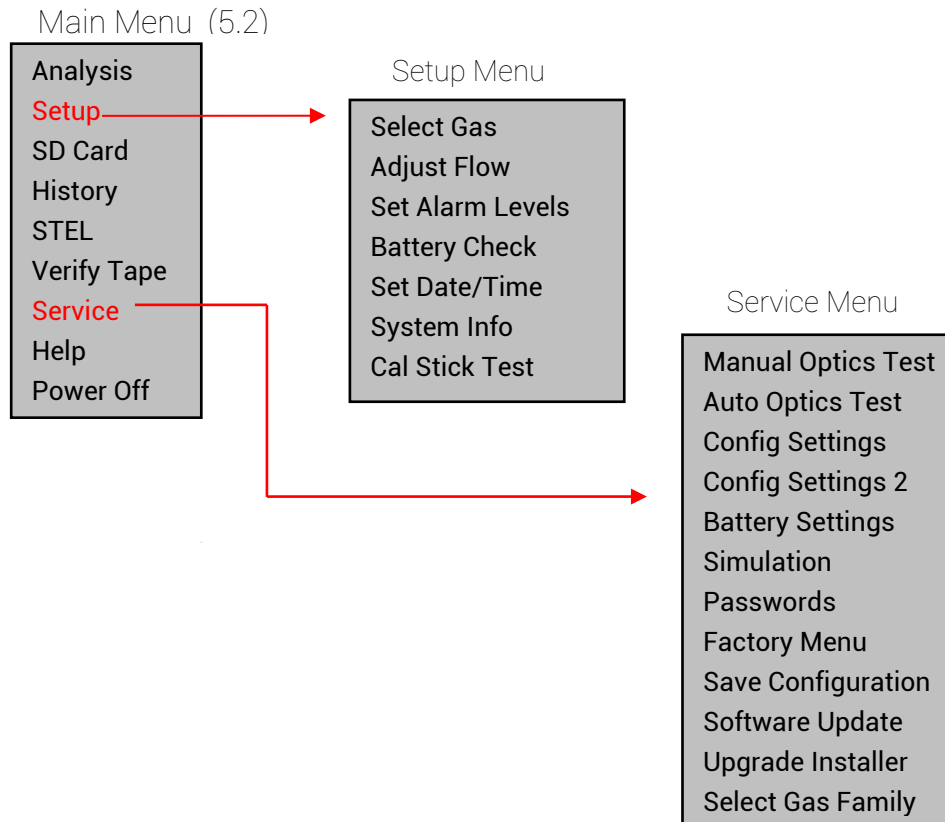

Note 1: The setup menu is not password protected by default.

Note 2: The service menu is password protected by default.

Passwords can be changed/cleared in the Password screen on the Service Menu (5.6.3)

5.2.1 Analysis

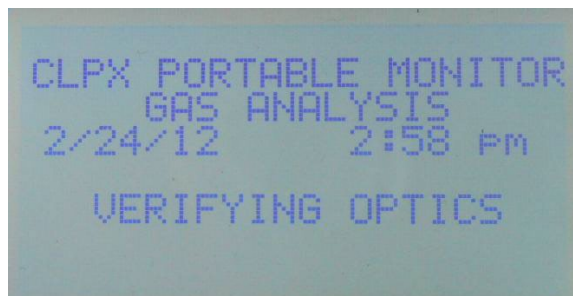


Figure 5.5

Selecting this menu item will start gas analysis and bring up the screen in figure 5.5. During this phase the tape will advance, and the system will verify the optical system and adjust the light intensity if necessary. Once the optical system is verified the analysis screen shown in figure 5.6 will be displayed and the pump will start.



Figure 5.6

NOTE 1 – An asterisk in the lower right corner indicates the machine has passed the time necessary to detect the LDL for the selected gas since the last tape advance. The asterisk will disappear, and the timer reset at each tape advance. Press the down arrow to reset the timer when looking for LDL at another location.

The words 'Alarm Level 1' and 'Alarm Level 2' will blink when the concentration meets or exceeds the preset alarm levels. Alarm Level 1 blinks at a 2 second rate while Alarm Level 2 blinks at a 1 second rate. In addition, the letters 'SD' will appear in the upper left corner under the up arrow when there is an error writing the MicroSD' card or there is no MicroSD card inserted.

The status line displayed between the cassette part number and the gas/range display will show various information about the current analysis cycle :

- Beyond Full Scale (Actual concentration exceeds full scale)
- Shutdown in X seconds (battery voltage below shutdown level)
- Low Battery (battery voltage below alarm level)
- Adv Pending (preparing/advancing cassette)

NOTE: During analysis detailed information is viewable by using the LEFT key. This screen may be useful for service and repair. To return to the main analysis screen press the LEFT key again.

5.2.2 Setup Menu

The Setup Menu contains the screens necessary to configure the CLPx for operation. The setup menu is not password protected by default but may be password protected (see service menu).

5.2.3 SD Card

The SD Card screen displays the amount of empty space remaining on the MicroSD card. Check this value before each use to assure adequate space remains to log STEL, Concentration, and event history to the card.

5.2.4 History

The recent event history is kept in the CLPx regardless of whether an SD card is inserted or not. A minimum of 16 events are kept at all times although many more events are normally stored depending on memory usage. See appendix D for description of CLPx events.

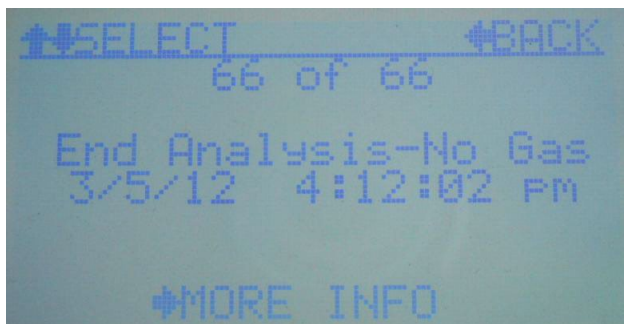


Figure 5.7

The most recent event is always shown first. Use the UP/DOWN keys to scroll through recent events and the LEFT key to exit back to the main menu. You can also use the RIGHT key for more information on selected events. When the right key is pressed the screen shown in figure 5.8 will display.

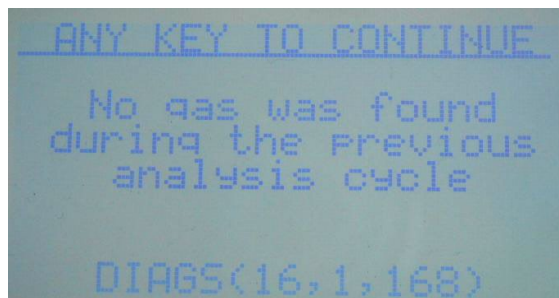


Figure 5.8

Depending on the event this may give more detailed information or diagnostic information on the event. The 'DIAG' codes displayed at the bottom are useful when contacting DOD Support.

5.2.5 STEL

The recent STEL event history is kept in the CLPx regardless of whether an SD card is inserted or not. A minimum of 16 STEL values are stored depending on the memory usage of the CLPx. The most recent STEL reading will be displayed as shown in figure 5.9.

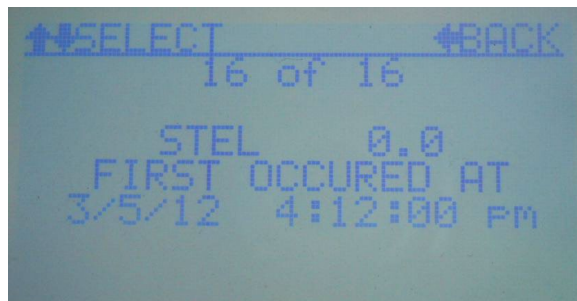


Figure 5.9

At the end of each analysis cycle a new STEL value is added to the log. The time of the highest value is displayed on the screen along with the STEL concentration value. Detailed information is also written to the MicroSD card at the same time (if a properly formatted card is inserted).

5.2.6 Verify Tape

When this item is selected a screen similar to Figure 5.9 will display showing the current selected gas and which ChemLogic cassette should be inserted. Use this anytime to check that the proper tape is installed.



Figure 5.10

5.2.7 Service

The Service Menu contains the screens necessary for testing and configuration of the CLPx. It is not normally accessed after the machine is initially configured. See section 5.4 for details. Note that the Service menu is always password protected.

5.2.8 Help

The Help menu contains basic information on the operation of the CLPx. Browse through the help screens using the UP/DOWN arrows and use the left arrow to exit back to the menu.

5.2.9 Power Off

To power off the CLPx select this item and answer YES to the "Are you sure?" screen that appears. Note that this screen can be quickly accessed by using the UP arrow from the top of the menu so the operator can exit analysis, press UP to get to this item then ENTER and answer YES to power off quickly.

5.3 Setup Menu

The setup menu is not password protected by default. In the Configuration settings on the Service Menu the password requirement can be enabled if needed.

5.3.1 Select Gas

This selection will display the available gas selections based on the gas family purchased and installed at the factory. Use the ENTER key to select the gas to monitor for which will then set the default Alarm Levels and give the operator the opportunity to change them by going directly to the Set Alarm Level screen (see 5.3.3)

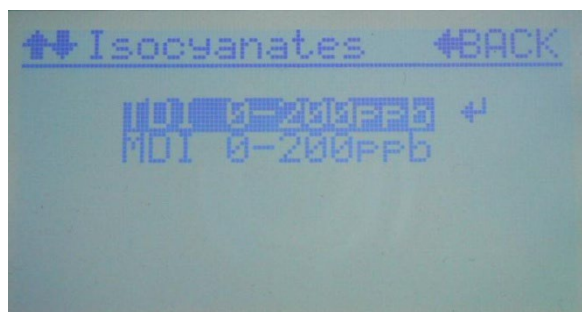


Figure 5.11

5.3.2 Adjust Flow

This selection will display the screen shown in figure 5.12. Connect the included flow meter and adjust the pump to get the flow to the value shown. (ex 200 cc). As shown in the screen you can normally adjust the pump using the left right keys or if you would like to enter a specific value press the ENTER key and use the procedure outlined in 5.1.5. A ChemLogic® Cassette tape must be installed when adjusting flow.

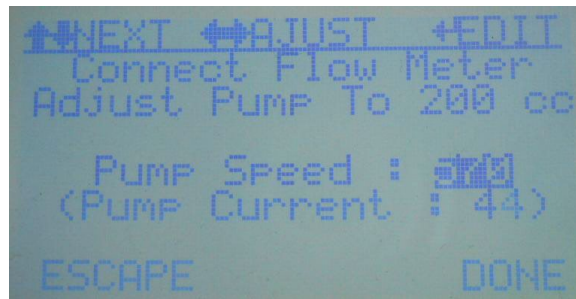


Figure 5.12

5.3.3 Set Alarm Levels

This selection will display the screen shown in figure 5.13 to adjust the Alarm Level if necessary. When a gas is selected the alarm levels are set to the default values which are normally 1 and 2 TLV. They can be adjusted if necessary at any time in this screen. Be sure to select 'SAVE' when done if the values are changed.

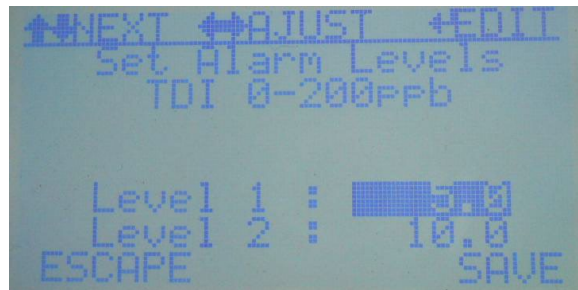


Figure 5.13

5.3.4 Battery Check

The battery check menu will display the screen shown in figure 5.14 which displays the current battery voltage along with the warning and shutdown levels. These levels can be adjusted if necessary (not recommended) on the Service Menu.

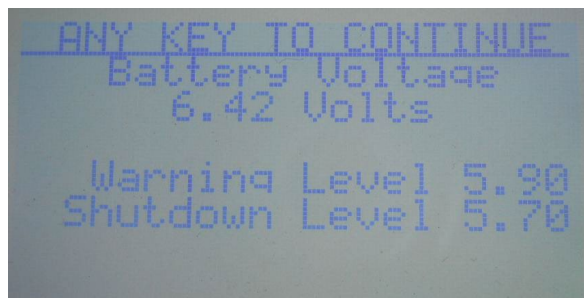


Figure 5.14

5.3.5 Set Date/Time

Allows the operator to change the Date/Time. Note the hour displayed is in 24-hour format. Use the LEFT/RIGHT keys to quick adjust each field and the UP/DOWN keys to select each field.

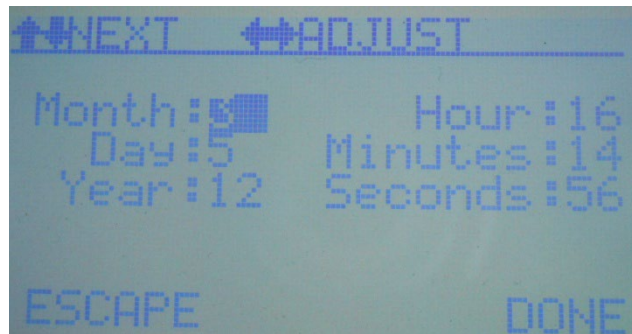


Figure 5.15

5.3.6 System Info

Displays the current software version and serial # and selected gas for information purposes only. Software versions 12.3 and higher will also display the Installer/Updater version #.

5.3.7 Cal Stick Test

The Cal Stick included with in the case is not necessary for calibrating the system as the optics will self-calibrate however the Cal Stick Test screen allows for verifying that the optics can adjust appropriately and detect color change.

NOTE: It is recommended to perform an Optics Auto Test on the Service menu after running the CAL Stick Test.

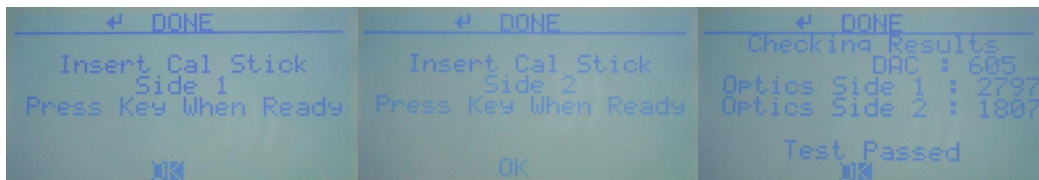


Figure 5.13

Figure 5.14

Figure 5.15



To run the Cal Stick test, follow the directions on the screen. Insert Cal Stick side 1, then Cal Stick Side 2 and view the results. The screen will display an error if the values are out of range or otherwise invalid.

5.4 Service Menu

The service menu is password protected using the Service Level password. Most of the items on this menu are for service personnel or validation of the system and are not needed during normal operation of the CLPx.


5.4.1 Manual Optics Test

The manual optics test allows the light (DAC) to be manually adjusted to check the response of the readings from the installed ChemLogic Cassette Tape. Use the LEFT/RIGHT keys to adjust the amount of light in the optics. The resulting reading from the optics will be displayed after a short delay. To set a specific light(DAC) reading use the detailed editing feature by touching the ENTER key. Note that the values used in this screen are for service/validation only and will not be used when returning to analysis. The Auto Adjust test below (5.4.2) is the recommended quick method to verify the optical system.

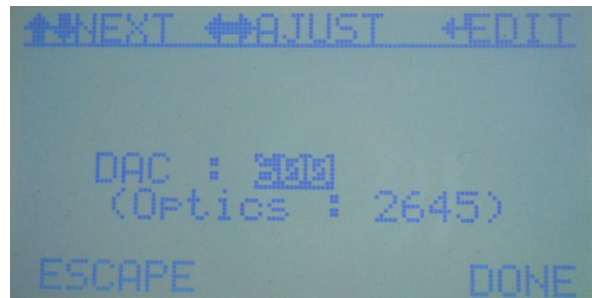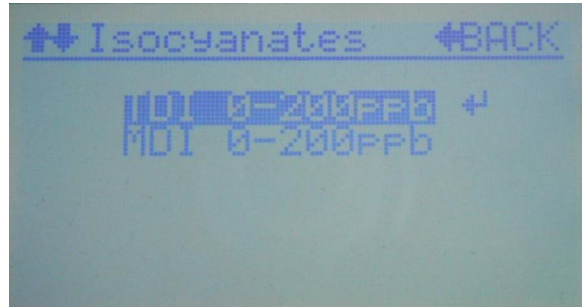

5.4.2 Auto Optics Test

Use this test to verify the adjustment of the optics and the light intensity. The tape will be approximately 2800.

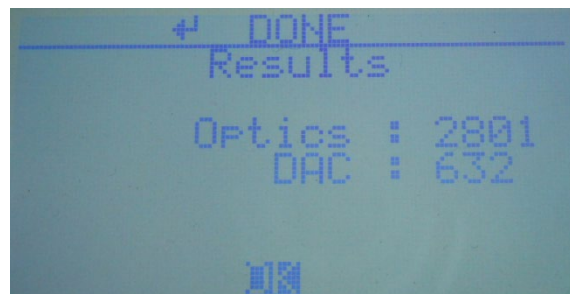


5.4.3 Config Settings

The Config settings allow various options in the CLPx to be adjusted. Most of the fields can be quickly changed using the normal edit feature with the LEFT/RIGHT keys. Each value is factory set to the recommended value.


WARNING: The K Factor is multiplied by the actual concentration for the selected gas. It is not recommended to change the value to anything other than 1.000.

- K Factor: (default 1.000). This value will scale the concentration reading on the display.
- Tape Cntr: (default: off) The tape counter feature is not yet included in CLPx software.
- Keypad Beep: (default on) The keypad beep feature gives audible response each time a key is pressed and may be disabled by changing this value to off.
- Latching: (default off) The latching feature is not yet included in the CLPx software.
- BkLght Secs: (default 30) This value determines the timeout to turn off the backlight to conserve energy.

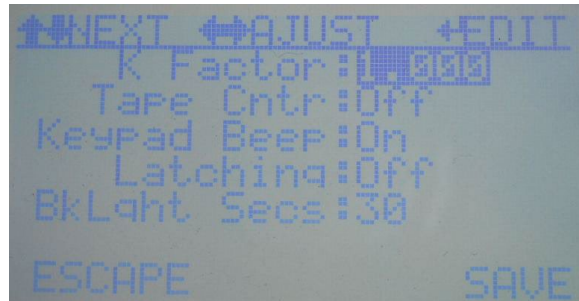


5.4.4 Config Settings 2 (PWD settings on older versions)

The config settings 2 menu allows more options to be modified including whether the setup menu is password protected or not. By default, any operator can access the setup menu. To limit access, change this value to ON and use the SETUP or SERVICE passwords to access the setup menu.

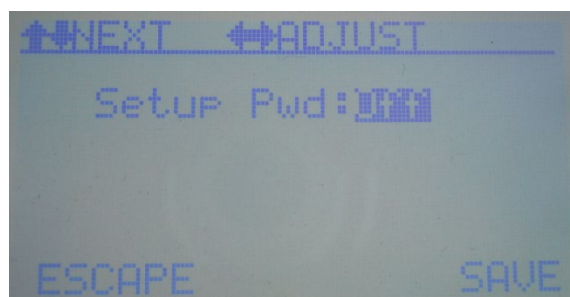

5.4.5 Battery Settings

The battery settings allow changing of the battery limits but should only be adjusted by service personnel. The low battery warning will appear when the battery voltage reaches the 'Batt Warn Lvl' or below. The CLPx will automatically shut down with 20 second warning when the voltage level reaches the 'Batt Shutdown' voltage or below. The shutdown feature can be disabled however it is highly recommended to leave this feature on – see warning below.

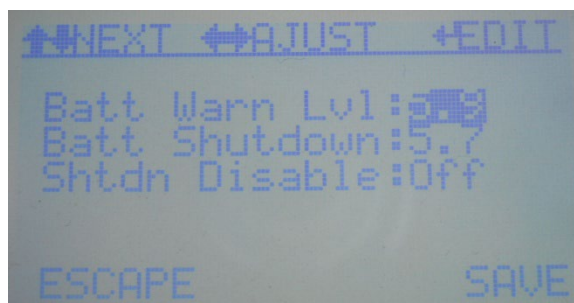

WARNING: The automatic shutdown feature of the CLPx during low voltage situations is important to protect the unit. Disabling this feature or changing the recommended voltage level may result in loss of internal configuration, corruption of the MicroSD card and/or corruption of all internal memory.

5.4.6 Simulation

The simulation screen can be used for demonstration and training purposes. Enter a value to indicate the level of optical change desired and enable the simulation mode. Return to the analysis screen to begin simulation. Simulation mode remains active until disabled, shutdown, or loss of power. Simulation mode is disabled upon power off the CLPx.

WARNING: When simulation mode is enabled the system will not detect gas although the screen may indicate a concentration. The word 'Simulation' will appear on the analysis screen above the concentration.

5.4.7 Passwords

The password screen displays the passwords entered in the system and allows them to be edited. To change a password, scroll to the desired password location and press enter. Enter the new password and save it to update the list. Up to 14 passwords may be entered into the system.

5.4.8 Factory Menu

The Factory Menu is available only to trained service personnel and is password protected. Contact DOD for more information.


5.4.9 Software Update (Version 12.3 and Higher)

The software update selection allows new CLPx software to be installed into the system. Contact DOD Technologies regarding the latest version of software and instructions on how to install correctly.

WARNING: The software update procedure should only be used under the guidance of DOD trained service personnel. Contact DOD Technologies, INC for more information. Improper use of the software update selection may result in loss of internal configuration, corruption of the MicroSD card and/or corruption of all internal memory.

5.5 Cassette Installation and Removal

Open the Cassette Access Door by turning the Cassette Release knob fully to the left. Remove the black tape guide and place the ChemLogic CLPx cassette inside with the label facing upright and outwards.

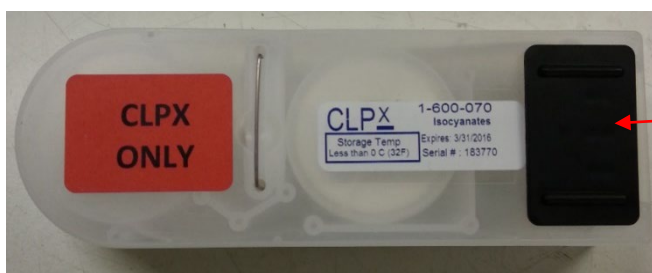

Remove this piece before installing cassette

The cassette release knob also opens the gate to allow space for the tape to sit between the optics block and the inlet nosepiece. Ensure the tape is properly located between these two pieces before closing the door and closing the Cassette Release Knob.




Knob still open

Tape sits between optics block and red nosepiece on gate

To remove the cassette, simply turn the Cassette Release Knob and open the door. Pull the wire handle attached to the cassette. If the tape does not come free, close the gate (by turning the Release Knob), advance the tape, and try again.

If the cassette somehow becomes disassembled, consult the following diagram to reassemble the cassette.

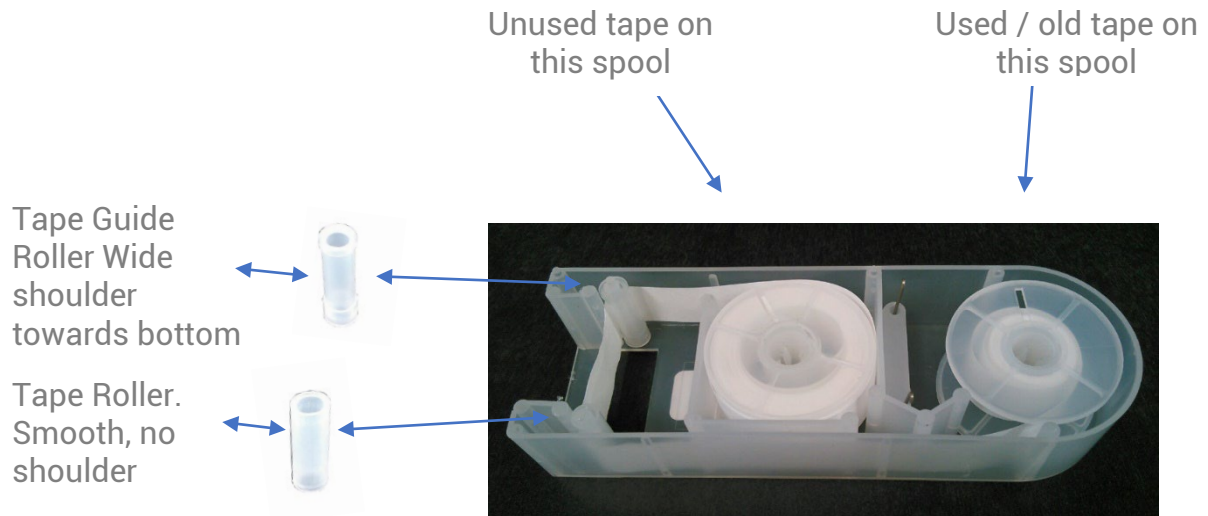

Chapter 6 – Maintenance

6.1 Micro Secure Digital (SD) Card Replacement

See Appendix F for detailed information on the contents of the SD Card.

Install the MicroSD card with the 8-pin gold edge connector facing to the left of the machine when viewing from the back – see Figure 6.1

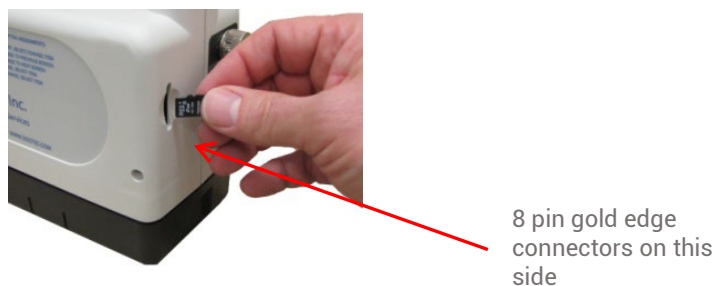


Figure 6.1

6.2 Routine Maintenance

Reliable operation of the CLPx monitor requires that the unit be maintained in good working order and that the sample input path and tape transport area are clean. Regularly inspect the CLPx monitor for proper operation and damage. Establish a schedule for cleaning the CLPx monitor based on usage and the nature of the sampling environment and clean as needed according to the cleaning instructions below. If you have any questions or concerns, contact DOD Technologies.

6.2.1 Inspection of the CLPx

1. Inspect the CLPx monitor for damage such as cracks to the housings or loose or missing components.
2. Check the tape door release and lock for proper operation. Check the tape door for damage.
3. Check the sample input path for damage or for missing components.
4. The inlet tube must be properly seated in the optics block and flush with the end of the cover tube.
5. Start the unit and check for any performance issues such as excessive or unusual noise, erratic operation, or problems with the display. If any damage is found, remove the unit from service and tag for repair by authorized personnel.

6.2.2 Cleaning the CLPx

Cleaning of the CLPx portable gas monitor is essential to maintain reliable and accurate measurements. Problems with calibration may be an indication of the need for cleaning. Dust and contaminants can build up and interfere with the sensitive optics. Most routine cleaning of the CLPx monitor involves removal of tape dust build up and cleaning of the sample input path. Additional cleaning may be required in dusty environments or in some atmospheres, such as those where MDI is being measured, which may contain wet or sticky aerosols that can build up in the sample input path. Establish a cleaning schedule that is suitable for the conditions where the CLPx monitor will be used.

Wear powder-free surgical gloves (or equivalent) when cleaning the interior surfaces and mechanism to avoid contact with the paper tape dust and other contaminants and when handling pieces of the paper tape in the course of these instructions.

Cleaning the CLPx monitor may require the use of pressurized air. For some cleaning, a rubber bulb blower will provide a good puff of air to remove dust. Avoid the use of a photographic blower brush which may snag and leave brush hair in the mechanism. If compressed air is used, use only clean, dry air at a maximum pressure of 30 psi. Never use shop air which may contain oil or other contaminants. Canned compressed air for photographic or electronic cleaning is recommended when used in accordance with the product. If a spray solvent cleaner is required, use only a **residue free** cleaner such as an aerosol contact and circuit board cleaner. Follow the manufacturer's instructions for proper use of the cleaner.

WARNING: Compressed air is hazardous. Careless handling of compressed air may result in serious injury or death.

6.2.3 Cleaning the Exterior

Clean the outside of the CLPx monitor with a damp cloth. Keep the tape door closed and avoid excessive water. To remove oily or sticky deposits, use a mild detergent solution on the cloth.

6.2.4 Cleaning the Interior

For routine cleaning, carefully wipe the inside of the cassette chamber but avoid contact with the tape gate, the sample input path, and the optic block. Cleaning the tape gate, the sample input path, and the optic block are described below.

6.2.5 Cleaning the Gate

When a sample is being taken, the paper tape is held in place by the tape gate. When the sample is complete, the gate opens, and the tape advances a new segment of tape into position for the next test. Paper dust from the tape may accumulate in the tape gate area. To clean the tape gate area, use a rubber bulb blower or clean pressurized air.

Chapter 7 – Service & Support

Contact DOD Technologies for product assistance and technical support:

Phone Support

M-F 8:30am – 5pm (Central Time Zone-U.S.A.)

815.788.5200

International Headquarters

675 Industrial Drive, Bldg. A.

Cary, IL 60013

E-mail us at:

solutions@dodtec.com

Visit our website:

DODtec.com

For permanent discontinuation:

Discontinued units may be eligible for recycling. Please contact DOD Technologies for additional information and instructions for arranging safe return of your equipment.

Appendix A – Cassette Expirations

Cassette Part #	Description	Machine	*Exp Months	Storage Temp
1-200-070	CLPx Phosgene ChemLogic Cassette	CLPx	12	Less than 25C (77F)
1-200-075	CLPx Velcorin ChemLogic Cassette	CLPx	12	Less than 25C (77F)
1-300-070	CLPx Hydride ChemLogic Cassette	CLPx	12	From 4-10C (40-50F)
1-300-075	CLPx COS ChemLogic Cassette	CLPx	12	From 4-10C (40-50F)
1-390-070	CLPx H2S ChemLogic Cassette	CLPx	6	Less than 25C (77F)
1-400-070	CLPx Mineral Acid ChemLogic Cassette	CLPx	12	Less than 25C (77F)
1-400-075	CLPx Nitric Acid ChemLogic Cassette	CLPx	6	Less than 0 C (32F)
1-410-070	CLPx Mineral Acid II and NF3 ChemLogic Cassette	CLPx	6	Less than 0C (32F)
1-420-070	CLPX SG Mineral Acid ChemLogic Cassette	CLPx	12	Less than 0C (32F)
1-490-070	CLPx Organic Acid ChemLogic Cassette	CLPx	12	Less than 25 C (77F)
1-500-070	CLPx Chlorine ChemLogic Cassette	CLPx	6	Less than 25C (77F)
1-500-075	CLPx Ultra Low Level Chlorine ChemLogic Cassette (Discard 14 days after opening)	CLPx	6	From 4-25C (40-77F)
1-530-070	CLPx Ozone ChemLogic Cassette	CLPx	12	Less than 25C (77F)
1-550-070	CLPx Chlorine (Fluorine/Oxidizers) ChemLogic Cassette	CLPx	6	Less than 25C (77F)
1-560-070	CLPx Chlorine SG ChemLogic Cassette	CLPx	12	Less than 25C (77F)
1-600-070	CLPx Diisocyanate ChemLogic Cassette	CLPx	6	Less than 0C (32F)
1-600-570	CLPx Nitrogen Dioxide ChemLogic Cassette	CLPx	6	Less than 0C (32F)
1-700-070	CLPx Ammonia ChemLogic Cassette	CLPx	12	Less than 0C (32F)
1-800-070	CLPx HCN ChemLogic Cassette	CLPx	6	Less than 0C (32F)
1-810-070	CLPx Sulfur Dioxide ChemLogic Cassette	CLPx	6	Less than 0C (32F)
1-D11-070	CLPx Hydrazine ChemLogic Cassette	CLPx	9	Less than 25C (77F)
1-E15-070	CLPx TDI & MDI SPxNO2 ChemLogic Cassette	CLPx	6	Less than 0C (32F)

**Expiration Months are from the date of manufacture. CLPx Cassettes with 12 months expiration will ship with minimum 9 months remaining. CLPx Cassettes with 10 months expiration will ship with minimum 8 months remaining. CLPx Cassettes with 6 months expiration will ship with minimum 4 months remaining.*

***If DOD Technologies ChemLogic Cassettes are not stored according to the stated storage requirements, we recommend using within 45 days.*

IMPORTANT: The expiration date of all ChemLogic Cassettes is printed on the label of each cassette. However, once the package is opened the maximum days the cassette can be used without proper storage is indicated in the table. The effective expiration date is the sooner of the expiration date on the label or the appropriate number of days from the date opened.

Example: A cassette part # 1-600-070 has the expiration date of 11/31/2018 printed on the label. It is opened on 05/01/2018 and kept in the CLPx. The actual expiration date would be 6/29/2018 (60 days after opening).

If the cassette is returned to storage in the original packaging (including bag) after each use the cassette can be used up to the original expiration date printed on the label.

When the ChemLogic Cassette package is first opened the date should be recorded on the cassette for reference.

Appendix B – Options / Accessories / Spare Parts

PART NUMBER	PART DESCRIPTION
2-800-013	Particulate Filter for Corrosive Gases (Mineral Acids)
2-700-003	CLPx Exhaust Fitting Option
D016-0802	CLPx Calibration Stick
2-600-202	SD Micro Memory Card (2GB)
2-700-014	CLPx Desiccant Filter with Fittings
2-700-004	CLPx Teflon Sampling Wand For 1/4" OD Nozzle
2-700-007	CLPx Teflon Sampling Wand For 3/8" OD Nozzle
2-100-503	Filter for H2S Scrubber
2-700-A06	CLPx Charger Assembly (Grounded)
1-000-A04	CLPx Flow Test Kit
D096-2938	CLPx Assembly Display Top Cap
2-700-A04	CLPx Battery Pack
2-700-013	CLPx Pyrolyzer Option
2-700-040	CLP/Next Step Upgrade Package to CLPx
2-9300-102	Fitting Reducer 3/8" to 1/4" Tube Quick Connect Polypropylene
Q035-0017	Knob - CLP/Nextstep Open Gate
780248	Particulate Filter for Non-Corrosives (Phosgene & Hydrides)
Q077-0463	Shoulder Strap 1" x 48" Light Duty
2-800-013	Particulate Filter for Corrosive Gases (Mineral Acids)
2-700-A07	Assembly Internal Filter CLPx
2-100-121	CLPx Sample Inlet Nozzle
2-700-008	Upgrade Kit CLPx Inlet Nozzle
Q096A3172	Assy CLP Window and Door
2-700-015	Option CLPx High Humidity Nosepiece (Tech Upgrade Only)
1-000-556	Flow meter 0.1 to 1.0 LPM
2-700-041	New CLPx Kit Case
Q2700-0001	PCB Assembly CLP Microcontroller
Q096-3173	CLPx Case with Custom Foam
2-700-A02	Assy CLPx Optics Block
9-300-059	Synthetic Grease

Appendix C – Technical Specifications

Physical Dimensions	
Height	8.6" (21.8 cm)
Width	4.1" (10.4 cm)
Depth	11.3" (28.7 cm)
Weight	6 lbs. (2.72 kg)
Operating Temperature	40°F to 95°F / 4°C to 35°C
Flow	
Sample Tubing	¼" O.D. FEP Teflon (10 ft. max) 6" Maximum for Diisocyanate Detection
Electrical	
Power	6V DC 0.2 Amp Max
Misc.	
Data Logging	Micro SD card

Appendix D – System Event Messages

Color Coding

RED	Alarm	Gas Alarm
ORANGE	Fault	Service Fault
YELLOW	Maintenance	Minor Fault
BLUE	Event	Information Message
GREEN	Event	Status Update

CLPx Event ID	Message	Possible Cause
7028	Gas Alarm Level 1	Gas Detected
7029	Gas Alarm Level 2	Gas Detected
7001	No Gas Data	No Gas Selected
7002	No Gas Selected	No Gas Selected
7003	Invalid Gas Data(1)	Contact DOD
7004	Invalid Gas Data(2)	Contact DOD
7005	Invalid Gas Data(3)	Contact DOD
7006	Invalid Gas Data(4)	Contact DOD
7007	Optic Calib Fault(1)	Optics Dirty, No Cassette Installed or End of Tape
7008	Optic Calib Fault(2)	Optics Dirty, No Cassette Installed or End of Tape
7009	Optic Calib Fault(3)	Optics Dirty, No Cassette Installed or End of Tape
7013	Invalid Gas Data 1	Contact DOD
7014	Invalid Gas Data 2	Contact DOD
7015	Invalid Gas Data 3	Contact DOD
7016	Invalid Gas Data 4	Contact DOD
7017	Optic Fault L	Contact DOD
7018	Optic Fault H	Contact DOD
7030	High Background	No Cassette or End of Tape
7031	Invalid K Factor	K Factor must be > 0.5 and < 3.0
7032	Tape Advance Err1	Tape Jam,, Low Voltage
7033	Tape Advance Err2	Tape Jam,, Low Voltage
7034	No Pump Detected	Contact DOD
7026	Check Filter	Replace Carbon Filter
7027	Filter Clogged	Replace Carbon Filter
7037	Power Off NVRam Error	Machine Configuration error
7019	Memory Flash Err	No card, Card Full, or Error writing card

CLPx Event ID	Message	Possible Cause
7010	Power On	
7011	Power Off	
7021	Analysis Started	Analysis Mode Selected on Main Menu
7022	End Analysis-No Gas	End of analysis cycle - no gas was detected
7023	End Analysis-Gas	End of analysis cycle - Gas was detected
7036	Power Off Shutdown	Low voltage auto shutdown
7012	Gas Selected	Gas Selection made
7020	Defaults Restored	
7024	Event Log Cleared	
7025	Conc Log Cleared	
7038	Alarm Lvl1 Change	
7039	Alarm Lvl2 Change	
7040	Software Update	System Software update
7041	Update Complete	System Software update
7042	Installer Update	Software Installation System Update
7043	Installer Upd Comp	Software Installation System Update

Appendix E – Gas Specifications

CLPx LDL List (Software Version 19.04 Build 991 and Above)

ChemLogic Cassette PN	Name	Gas	LDL	FS	Units	TLV	Alarm 1 Default	Alarm 2 Default	Response Time TLV (T100)*seconds
1-700-070	Ammonia	NH3	1.9	75	ppm	25	25	50	12
1-420-070	Arsenic Pentafluoride [^]	AsF5 (HF)	0.4	10	ppm	0.5	2	4	16
1-420-070	Arsenic Trichloride ^{^^}	AsHCl3 (HCL)	0.2	15	ppm	2	5	10	30
1-420-070	Arsenic Trifluoride [^]	AsF3 (HF)	0.4	10	ppm	0.5	2	4	16
1-300-070	Arsine	AsH3	0.9	500	ppb	5	50	100	16
1-300-070	Arsine	AsH3	0.9	50	ppb	5	5	10	16
1-420-070	Boron Tribromide ^{^^^}	BBr3 (HBr)	0.3	20	ppm	2	3	6	12
1-420-070	Boron Trichloride ^{^^}	BCl3 (HCL)	0.2	15	ppm	2	5	10	30
1-420-070	Boron Trifluoride	BF3	98.5	5000	ppb	100	100	200	12
1-490-070	Bromine	HCOOH	0.5	10	ppb	5	3	6	
1-420-070	Carbonyl Fluoride [^]	COF2 (HF)	0.4	10	ppm	2	2	4	16
1-300-075	Carbonyl Sulfide	COS	1	20	ppm	5	5	10	12
1-500-075	Chlorine	Cl2	1	20	ppb	100	500	1000	16
1-500-075	Chlorine	Cl2	1	5	ppb	100	1	2	
1-560-070	Chlorine SG	CL2	44	5000	ppb	100	500	1000	16
1-560-070	Chlorine SG	CL2	7	2000	ppb	100	500	1000	16
1-550-070	Chlorine Dioxide	ClO2	32.1	1000	ppb	100	100	200	
1-420-070	Chlorine Trifluoride [^]	ClF3 (HF)	0.4	10	ppm	0.5	2	4	16
1-300-070	Diborane	B2H6	14.9	1000	ppb	100	100	200	12
1-420-070	Dichlorosilane ^{^^}	SiH2Cl2 (HCL)	0.2	15	ppm	2	5	10	30
1-420-070	Difluoromethane ^{**}	CH2F2	1	40	ppm	1.2	10	20	88
1-700-070	Dimethylamine	DMA	49	5000	ppb	5000	2500	5000	16
1-550-070	Fluorine	F2	86.5	3200	ppb	100	1000	2000	12
1-420-070	Fluorosilicic acid [^]	H2SiF6 (HF)	0.4	10	ppm	0.5	2	4	16

1-420-070	Fluoromethane**	CH3F	1	40	ppm	1.8	10	20	104
1-300-070	Germane	GeH4	98.3	200 0	ppb	200	200	400	60
1-420-070	Germanium Tetrafluoride^	GeF4 (HF)	0.4	10	ppm	0.5	2	4	16
1-420-070	Hexachlorodisilane^^	SiCl2 (HCL)	0.2	15	ppm	2	5	10	30
1-420-070	Hexafluorocyclobutene**	C4F6	1.5	40	ppm	5	5	10	32
1-600-070	Hexamethylene Diisocyanate	HDI	2.6	200	ppb	5	5	10	116
1-600-070	HMDI	HMDI	1.2	100	ppb	5	5	10	116
1-D11-070	Hydrazine	N2H4	8	500	ppb	10	10	20	180
1-420-070	Hydrogen Bromide	HBR	0.3	20	ppm	3	3	6	12
1-420-070	Hydrogen Chloride	HCL	0.2	15	ppm	2	2	4	30
1-800-070	Hydrogen Cyanide	HCN	0.4	20	ppm	4.7	4.7	9.4	16
1-420-070	Hydrogen Flouride	HF	0.4	10	ppm	0.5	2	4	16
1-420-071	Hydrogen Flouride	HF	0.1	4	ppm	0.5	1	2	
1-300-070	Hydrogen Selenide	H2Se	18.2	500	ppb	50	50	100	60
1-300-070	Hydrogen Sulfide	H2S	16.7	90	ppb	100 0	1000	2000	20
1-300-070	Hydrogen Sulfide	H2S	0.3	20	ppm	1	1	2	52
1-300-070	Hydrogen Sulfide	H2S	0.3	50	ppm	1	1	2	
1-300-070	Hydrogen Sulfide	H2S	0.3	50	ppm	1	1	2	
1-600-070	IPDI	IPDI	3	200	ppb	5	5	10	84
1-600-070	MDI	MDI	1	200	ppb	5	5	10	30
1-E15-070	MDI	MDI	1	200	ppb	5	5	10	
1-410-070	Nitric Acid	HNO3	12.5	600 0	ppb	200 0	2000	4000	16
1-550-070	Nitrogen Dioxide	NO2	85.2	900 0	ppb	200	3	6	280
1-600-570	Nitrogen Dioxide	NO2	0.7	25	ppm	0.2	3	6	32
1-410-070	Nitrogen Trifluoride**	NF3	1	50	ppm	10	5	10	4
1-600-070	NDI	NDI	2	100	ppb	5	5	10	
1-530-070	Ozone II	O3	30	300	ppb	100	100	200	28
1-535-070	Ozone II	O3	30	300	ppb	100	100	200	28
1-420-070	Phenyl Trichlorosilane^^	SiCl2Ph (HCl)	0.2	15	ppm	5	5	10	30
1-200-070	Phosgene	COCl2	4.9	90	ppb	100	100	200	16
1-200-070	Phosgene	COCl2	5.3	300 0	ppb	100	100	200	16
1-300-070	Phosphine	PH3	5	150 0	ppb	50	50	100	12

1-420-070	Phosphorus Oxychloride ^{^^}	POCl ₃ (HCl)	0.2	15	ppm	2	5	10	30
1-420-070	Phosphorus Pentachloride ^{^^}	PCl ₅ (HCl)	0.2	15	ppm	2	5	10	30
1-420-070	Phosphorus Pentafluoride [^]	PF ₅ (HF)	0.4	10	ppm	0.5	2	4	16
1-420-070	Phosphorus Tribromide ^{^^^}	PBr ₃ (HBr)	0.3	20	ppm	2	3	6	12
1-420-070	Phosphorus Trichloride ^{^^}	PCl ₃ (HCl)	0.2	15	ppm	2	5	10	30
1-420-070	Phosphorus Trifluoride [^]	PF ₃ (HF)	0.4	10	ppm	0.5	2	4	16
1-300-070	Silane	SiH ₄	0.2	50	ppm	5	5	10	16
1-420-070	Silicon Tetrachloride ^{^^}	SiCl ₄ (HCl)	0.2	15	ppm	2	5	10	30
1-810-070	Sulfur Dioxide	SO ₂	24.9	250 0	ppb	0	250	500	4
1-410-070	Sulfur Hexafluoride ^{**}	SF ₆	400	200 0	ppm	400	600	800	248
1-420-070	Sulfur Tetrafluoride	SF ₄ (HF)	0.4	10	ppm	0.5	2	4	16
1-410-070	Sulfuric Acid	H ₂ SO ₄	23.3	750	ppb	50	50	100	76
1-420-070	Tetrafluorosilane [^]	SiF ₄ (HF)	0.4	10	ppm	0.5	2	4	16
1-700-070	Tetrakis(dimethylamido)titanium	TDMAT	10	200 00	ppb	500 0	2500	5000	16
1-420-070	Tin Tetrachloride ^{^^}	SnCl ₄ (HCl)	0.2	15	ppm	2	5	10	30
1-600-070	Toluene Diisocyanate	TDI	1.1	200	ppb	5	5	10	16
1-E15-070	Toluene Diisocyanate	TDI	1	200	ppb	5	5	10	
1-420-070	Trichlorosilane ^{^^}	SiHCl ₃ (HCl)	0.2	15	ppm	2	5	10	30
1-700-070	Trimethylamine	TMA	30	500 00	ppb	500 0	2500	5000	16
1-420-070	Tungsten Hexafluoride [^]	WF ₆ (HF)	0.4	10	ppm	0.5	2	4	16
1-200-075	Velcorin	DMDC	10.3	500	ppb	40	50	100	

* Additional ranges may be available and are subject to change. Please see specific product brochure or contact DOD Technologies.

** Requires pyrolyzer for detection

[^] Compounds which hydrolyze to HF

^{^^} Compounds which hydrolyze to HCl

^{^^^} Compounds which hydrolyze to HBr

Software Notice

1-500-070 has been replaced by 1-560-070 for software version 20.03 and greater.

1-400-070 has been replaced by 1-420-070 for software version 19.04 and greater.

CLPx LDL List (Software Version 19.04 Build 990 and Below)

ChemLogic Cassette PN	Name	Gas	LDL	FS	Units	TL V	Alarm 1 Default	Alarm 2 Default	Response Time TLV (T100)*seconds
1-700-070	Ammonia	NH3	1.9	75	ppm	25	25	50	12
1-400-070	Arsenic Pentafluoride [^]	AsF5 (HF)	0.4	10	ppm	2	2	4	16
1-400-070	Arsenic Trichloride ^{^^}	AsHCl3 (HCL)	0.2	15	ppm	5	5	10	30
1-400-070	Arsenic Trifluoride [^]	AsF3 (HF)	0.4	10	ppm	2	2	4	16
1-300-070	Arsine	AsH3	0.9	500	ppb	5	50	100	16
1-300-070	Arsine	AsH3	0.9	50	ppb	5	5	10	16
1-400-070	Boron Tribromide ^{^^^}	BBr3 (HBr)	0.3	20	ppm	3	3	6	12
1-400-070	Boron Trichloride ^{^^}	BCl3 (HCL)	0.2	15	ppm	5	5	10	30
1-400-070	Boron Trifluoride	BF3	90.1	5000	ppb	100	100	200	12
1-300-075	Carbonyl Sulfide	COS	1	20	ppm	5	5	10	12
1-400-070	Carbonyl Fluoride [^]	COF2 (HF)	0.4	10	ppm	2	2	4	16
1-500-070	Chlorine	Cl2	39.5	5000	ppb	500	500	1000	16
1-500-075	Chlorine	Cl2	1	20	ppb	500	500	1000	16
1-500-070	Chlorine	Cl2	6.7	2000	ppb	500	500	1000	16
1-400-070	Chlorine Trifluoride [^]	ClF3 (HF)	0.4	10	ppm	2	2	4	16
1-300-070	Diborane	B2H6	14.9	1000	ppb	100	100	200	12
1-400-070	Dichlorosilane ^{^^}	SiH2Cl2 (HCL)	0.2	15	ppm	5	5	10	30
1-550-070	Fluorine	F2	86.5	3200	ppb	1000	1000	2000	12
1-400-070	Fluorosilicic acid [^]	H2SiF6 (HF)	0.4	10	ppm	2	2	4	16
1-300-070	Germane	GeH4	98.3	2000	ppb	200	200	400	60
1-400-070	Germanium Tetrafluoride [^]	GeF4 (HF)	0.4	10	ppm	2	2	4	16
1-400-070	Hexachlorodisilane ^{^^}	SiCl2 (HCL)	0.2	15	ppm	5	5	10	30
1-420-070	Hexafluorocyclobutene ^{**}	C4F6	1.5	40	ppm	5	5	10	32
1-600-070	Hexamethylene Diisocyanate	HDI	2.6	200	ppb	5	5	10	116
1-600-070	HMDI	HMDI	1.2	100	ppb	5	5	10	116
1-D11-070	Hydrazine	N2H4	8	500	ppb	10	10	20	180
1-400-070	Hydrogen Chloride	HCL	0.2	15	ppm	2	2	4	30
1-400-070	Hydrogen Bromide	HBR	0.3	20	ppm	3	3	6	12
1-800-070	Hydrogen Cyanide	HCN	0.4	20	ppm	4.7	4.7	9.4	16

1-400-070	Hydrogen Flouride	HF	0.4	10	ppm	2	2	4	16
1-300-070	Hydrogen Selenide	H ₂ Se	18.2	500	ppb	50	50	100	60
1-300-070	Hydrogen Sulfide	H ₂ S	16.7	90	ppb	10 00	1000	2000	20
1-300-070	Hydrogen Sulfide	H ₂ S	0.3	20	ppm	1	1	2	52
1-600-070	IPDI	IPDI	3	200	ppb	5	5	10	84
1-600-070	MDI	MDI	1	200	ppb	5	5	10	30
1-400-075	Nitric Acid	HNO ₃	12.5	6000	ppb	20 00	2000	4000	16
1-600-570	Nitrogen Dioxide	NO ₂	0.7	25	ppm	3	3	6	32
1-410-070	Nitrogen Trifluoride**	NF ₃	1	50	ppm	10	5	10	4
1-530-070	Ozone	O ₃	30	300	ppb				28
1-400-070	Phenyl Trichlorosilane^^	SiCl ₂ Ph (HCl)	0.2	15	ppm	5	5	10	30
1-200-070	Phosgene	COCl ₂	4.9	90	ppb	10 0	100	200	16
1-200-070	Phosgene	COCl ₂	5.3	3000	ppb	10 0	100	200	16
1-300-070	Phosphine	PH ₃	5	1500	ppb	50	50	100	12
1-400-070	Phosphorus Oxychloride^^	POCl ₃ (HCl)	0.2	15	ppm	5	5	10	30
1-400-070	Phosphorus Pentachloride^^	PCl ₅ (HCl)	0.2	15	ppm	5	5	10	30
1-400-070	Phosphorus Pentafluoride^	PF ₅ (HF)	0.4	10	ppm	2	2	4	16
1-400-070	Phosphorus Tribromide^^^	PBr ₃ (HBr)	0.3	20	ppm	3	3	6	12
1-400-070	Phosphorus Trichloride^^	PCl ₃ (HCl)	0.2	15	ppm	5	5	10	30
1-400-070	Phosphorus Trifluoride^	PF ₃ (HF)	0.4	10	ppm	2	2	4	16
1-300-070	Silane	SiH ₄	0.2	50	ppm	5	5	10	16
1-400-070	Silicon Tetrachloride^^	SiCl ₄ (HCL)	0.2	15	ppm	5	5	10	30
1-400-075	Sulfuric Acid	H ₂ SO ₄	23.3	750	ppb	50	50	100	76
1-810-070	Sulfer Dioxide	SO ₂	24.9	2500	ppb	0	250	500	4
1-400-070	Sulfur Tetrafluoride	SF ₄ (HF)	0.4	10	ppm	2	2	4	16
1-400-070	Tetrafluorosilane^	SiF ₄ (HF)	0.4	10	ppm	2	2	4	16
1-400-070	Tin Tetrachloride^^	SnCl ₄ (HCl)	0.2	15	ppm	5	5	10	30
1-600-070	Toluene Diisocyanate	TDI	1.1	200	ppb	5	5	10	16
1-400-070	Trichlorosilane^^	SiHCl ₃ (HCl)	0.2	15	ppm	5	5	10	30
1-400-070	Tungsten Hexafluoride^	WF ₆ (HF)	0.4	10	ppm	2	2	4	16

* Additional ranges may be available and are subject to change. Please see specific product brochure or contact DOD Technologies.

** Requires pyrolyzer for detection

^ Compounds which hydrolyze to HF

^^ Compounds which hydrolyze to HCl

^^^ Compounds which hydrolyze to HBr

Target Flowrate by Cassette

Part #	Flow	Gas	Range
1-200-070	200	COCl ₂	COCl ₂ (0-90)ppb
1-200-070	200	COCl ₂	COCl ₂ (0-3000)ppb
1-200-075	200	DMDC	DMDC(0-500)ppb
1-300-070	120	AsH ₃	AsH ₃ (0-50)ppb
1-300-070	120	AsH ₃	AsH ₃ (0-500)ppb
1-300-070	120	B ₂ H ₆	B ₂ H ₆ (0-1000)ppb
1-300-070	120	GeH ₄	GeH ₄ (0-2000)ppb
1-300-070	120	H ₂ Se	H ₂ Se(0-500)ppb
1-300-070	120	H ₂ S	H ₂ S(0-90)ppb
1-300-070	120	H ₂ S	H ₂ S(0-20)ppm
1-300-070	120	H ₂ S	H ₂ S(0-50)ppm
1-300-070	120	H ₂ S	H ₂ S(0-50)ppm
1-300-070	120	PH ₃	PH ₃ (0-1500)ppb
1-300-070	120	SiH ₄	SiH ₄ (0-50)ppm
1-300-075	120	COS	COS(0-20)ppm
1-390-070	120	H ₂ S	H ₂ S(0-50)ppm
1-400-070	200	MaCl ₂	MaCl ₂ (0-5000)ppb
1-410-070	200	CH ₂ F ₂	CH ₂ F ₂ (0-40)ppm
1-410-070	200	CH ₃ F	CH ₃ F(0-40)ppm
1-410-070	200	NF ₃	NF ₃ (0-50)ppm
1-410-070	200	HNO ₃	HNO ₃ (0-6000)ppb
1-410-070	200	SF ₆	SF ₆ (0-2000)ppm
1-410-070	200	H ₂ SO ₄	H ₂ SO ₄ (0-750)ppb
1-420-070	200	BF ₃	BF ₃ (0-5000)ppb
1-420-070	200	C ₄ F ₆	C ₄ F ₆ (0-40)ppm
1-420-070	200	HBR	HBR(0-20)ppm
1-420-070	200	HCL	HCL(0-15)ppm
1-420-070	200	HF	HF(0-10)ppm
1-420-070	200	HF	HF(0-4)ppm
1-490-070	200	HCOOH	HCOOH(0-10)ppm
1-500-075	200	CL ₂	CL ₂ (0-20)ppb
1-500-075	200	CL ₂	CL ₂ (0-5)ppb
1-530-070	120	O ₃	O ₃ (0-300)ppb
1-550-070	120	CL ₀₂	CL ₀₂ (0-1000)ppb
1-550-070	120	F ₂	F ₂ (0-3200)ppb

1-550-070	120	NO2	NO2(0-9000)ppb
1-560-070	200	CL2	CL2(0-2000)ppb
1-560-070	200	CL2	CL2(0-5000)ppb
1-600-070	200	HDI	HDI(0-200)ppb
1-600-070	200	HMDI	HMDI(0-100)ppb
1-600-070	200	IPDI	IPDI(0-200)ppb
1-600-070	200	MDI	MDI(0-200)ppb
1-600-070	200	NDI	NDI(0-100)ppb
1-600-070	200	TDI	TDI(0-200)ppb
1-600-570	200	NO2	NO2(0-25)ppm
1-700-070	200	DMA	DMA(0-50000)ppb
1-700-070	200	NH3	NH3(0-75)ppm
1-700-070	200	TDMAT	TDMAT(0-20000)ppb
1-700-070	200	TMA	TMA(0-50000)ppb
1-800-070	120	HCN	HCN(0-20)ppm
1-810-070	200	SO2	SO2(0-2500)ppb
1-D11-070	200	N2H4	N2H4(0-500)ppb
1-E15-070	200	MDI	MDI(0-200)ppb
1-E15-070	200	TDI	TDI(0-200)ppb

Appendix F – Removable Media

To ensure that historical and performance information is stored properly be sure to insert a Micro - Secure Digital (SD) card in the proper slot at all times. See Section 6.1

The SD card stores all information in standard comma separated values (*.CSV) format for easy access with any computer. Remove the SD card from the CLPx as described in section 6.1 and transfer the files to your personal computer*. The files are best viewed with programs that convert CSV format to rows and columns (Microsoft Excel, OpenOffice, etc) but can be viewed with any text editor.

Figure F.1 shows the folders found on the SD card depending on the configuration or your CLPx and the use of the SD cards.

Micro SD Card Root Folder

- \ConcLog – Concentration Log Files
- \Config – Configuration Files (DOD Service)
- \EventLog – Event Log Files
- \StelLog – STEL Log Files

Figure F.1

Files are stored in sub-folders which are named by the date they are created in the format yy-mm-dd. Within each folder are the individual log files for that day using the file name format "TYPEHH.csv" where TYPE = Type of file such as "CONC", "EVNT", or "STEL"

HH – Hour from 01 to 24

Example:

\ConcLog\12-02-21\Conc14.csv - Contains the concentration information (see below) for the 14th hour (2PM) on February 21st, 2012.

F.1 Concentration Log Files (CONCHH.CSV)

Concentration log files log information to the MicroSD card (if installed). A sample alarm file is shown in figure F.2 The columns show: Date/Time, Gas Concentration, Alarm Level 1, Alarm Level 2, Pump current (for filter diagnosis), Diagnostic Flags, two diagnostic values and the time since the pump started in seconds

Date/Time	Conc	Alarm Level 1	Alarm Level 2	Pump Current	Diagnostic Flags	Diag Value 1	Diag Value 2	Cycle Time
3/15/2012 17:33	0	500	1000	36	16	2851	2849	4
3/15/2012 17:33	0	500	1000	41	0	2851	2849	8
3/15/2012 17:33	0	500	1000	44	0	2851	2851	12
3/15/2012 17:33	0	500	1000	46	0	2851	2848	16
3/15/2012 17:33	0	500	1000	47	0	2851	2845	20
3/15/2012 17:33	0	500	1000	47	0	2851	2851	24
3/15/2012 17:33	0	500	1000	48	0	2851	2848	28
3/15/2012 17:33	0	500	1000	49	0	2851	2848	32
3/15/2012 17:33	0	500	1000	49	0	2851	2847	36

Figure F.2

F.2 Event Log Files (EVENTHH.CSV)

New fault and alarm events are stored in internal memory and copied to the MicroSD card (if installed). A sample event log as stored on the MicroSD is shown in figure F.3. The columns show: Date/Time, Event Description, Diagnostic Value 1, On/Off, and Diagnostic Value 2. The Events are listed in Appendix D.

Date Time	Event	Diagnostic Value 1	On/Off	Diagnostic Value 2
3/12/2012 10:44	Power On	A	1	0
3/12/2012 10:44	Installer Update	2A	1	120301
3/12/2012 10:44	Installer Upd Comp	2B	1	120301
3/12/2012 10:45	Power Off	B	1	0

Figure F.3

F.3 STEL Log Files (STELHH.CSV)

New STEL values are written to the log file at the conclusion of each analysis cycle. A sample STEL log as stored on the MicroSD is shown in figure F.4. The columns show: unused future use, Date/Time, date/time log written, High STEL value, High STEL Date/Time, length of STEL sample time (in seconds).

Future Use	Log Date Time	STEL High Conc	Date Time Occurred	Length (Seconds)
0	2/14/2012 10:44	12.3	2/14/2012 10:23	900
0	2/15/2012 12:24	1.4	2/15/2012 12:17	427
0	2/17/2012 8:44	2.3	2/17/2012 6:24	900
0	2/19/2012 21:45	19.2	2/19/2012 20:29	72

Figure F.4

F.4 Formatting Micro SD Disks

The Micro SD Cards can be formatted on any Windows PC with FAT16 or FAT32 format. Most new disks purchased are pre-formatted with FAT32 which will work.

WARNING – Formatting the Micro SD card will erase all information stored on the card.

F.5 Software Update Procedure

WARNING – Failure to carefully follow these instructions may result in corruption of the CLPx software and require the unit to be returned for service. We highly recommend contacting our service department for assistance when performing this procedure.

Before you begin verifying which versions of each are installed on your CLPx as follows:

- Select 'SETUP' from the main menu
- Scroll down and select 'System Info'
- On the screen it will show the following :

CLPx MONITOR
Version XX.XXXX
Date Version Updated
Installer MM.MMMM
Date Installer Updated
Serial # NNNN

If the Installer Version (MM.MMMM) is equal to or greater than 12.406 you can skip to the CLPx Software Update section.

F.5.A CLPx Installer Update

Do this only if your installer package is less than less than 12.406
You will need a special access password to perform this update

READ THROUGH ALL THESE DIRECTIONS BEFORE YOU BEGIN

- Power off the CLPx
- Insert the Micro SD Card with the installer update package
- Power on the CLPx
- Scroll down on the main menu and select SERVICE
- Enter the appropriate password
- Scroll down and select 'Factory Menu'
- Enter the special access password from DOD Technologies, INC
- Scroll down the factory menu and select UPGRADE INSTALLER

NOTE: *Follow these instructions carefully and be patient. The updating process can take some time to complete (DO NOT PRESS EXTRA KEYS)*

- On the Installer Update screen select 'DONE' then <enter>
- Wait for the Update Complete screen to appear.
- Select OK to exit the installer.

IMPORTANT: Return to the main menu and power off the CLPx

NOTE: *On some versions of software you may receive an erroneous error during the power off sequence. This will not cause a problem with your CLPx.*

F.5.B CLPx Software Update

READ THROUGH ALL THESE DIRECTIONS BEFORE YOU BEGIN

- Power off the CLPx
- Insert the Micro SD Card with the software update package
- Power on the CLPx with the <enter> key
- Scroll down on the main menu and select SERVICE
- Enter the appropriate password
- Scroll down and select SOFTWARE UPDATE
- When prompted for "Are you sure?" select YES then <enter>

NOTE: *Follow these instructions carefully and be patient. The updating process can take some time to complete (DO NOT PRESS EXTRA KEYS)*

- On the Software Update screen select 'DONE' then <enter>
- Wait for the software update to complete at which time the update complete screen will appear
- Press OK which will power off the CLPx
- Wait 5 seconds
- Power on the CLPx with the <enter> key
- Listen for a sequence of tones which ends with 4 quick beeps (approx. 10-15 seconds total)
- After the tones complete wait 5 seconds
- Power on the CLPx with the <enter> key
-

Your software update is complete and the new version # will be displayed on the welcome screen


Appendix G – ChemLogic® Cassettes

DOD ChemLogic cassettes are designed for use in colorimetric based gas monitoring systems. Since this is a particular end-use function and does not release or result in exposure to hazardous chemicals under normal use Material Safety Data Sheets (MSDS) are not required.

ChemLogic cassettes are non-toxic and require no special precautions for protection. However, contact with skin may cause the cassette to react, change color, and no longer be useful in your gas monitoring system. We therefore recommend that rubber gloves be worn at all times while handling including removal and installation. Always wash hands as a precaution after handling DOD ChemLogic cassettes.


Appendix H – Pyrolyzer Option

DOD Technologies offers a CLPx pyrolyzer option (2-700-013). When powering on, allow the pyrolyzer 30 seconds of warm up time before entering analysis. On a full charge, the pyrolyzer can run continuously for approximately 2-3 hours. The pyrolyzer option can be added as a factory upgrade upon initial purchase.

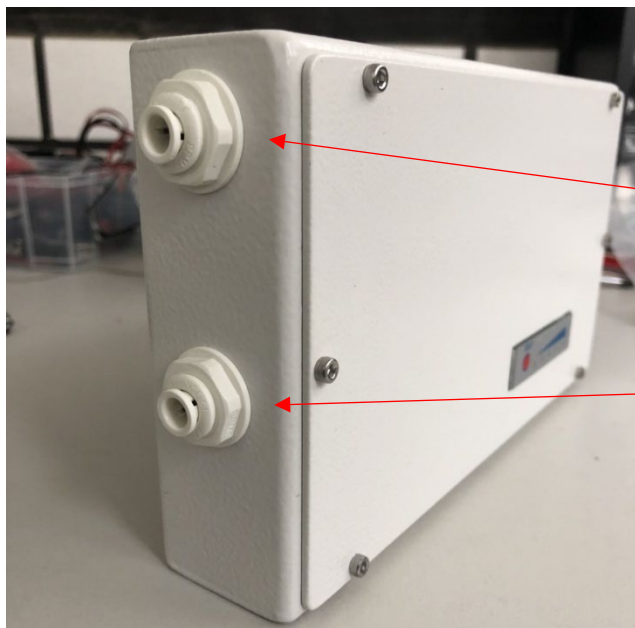

Sample Input

Sample output to CLPx

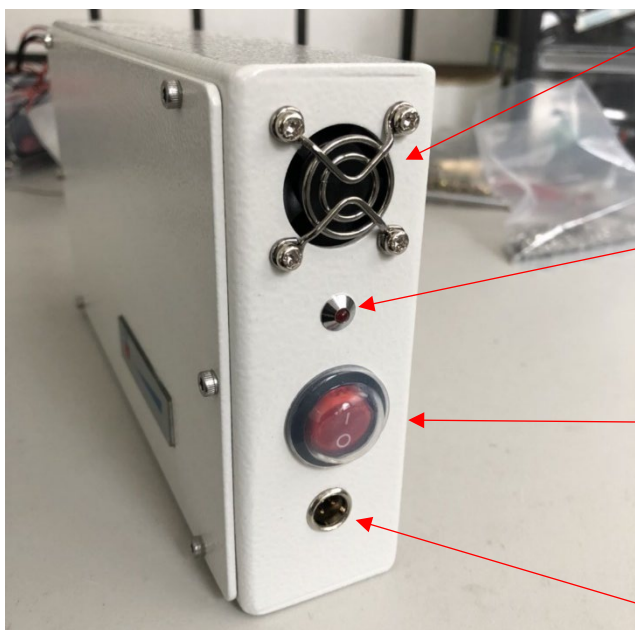


Pyrolyzer Fan

Heater Damage Indicator

Pyrolyzer Power Switch

Charging Indicator Light

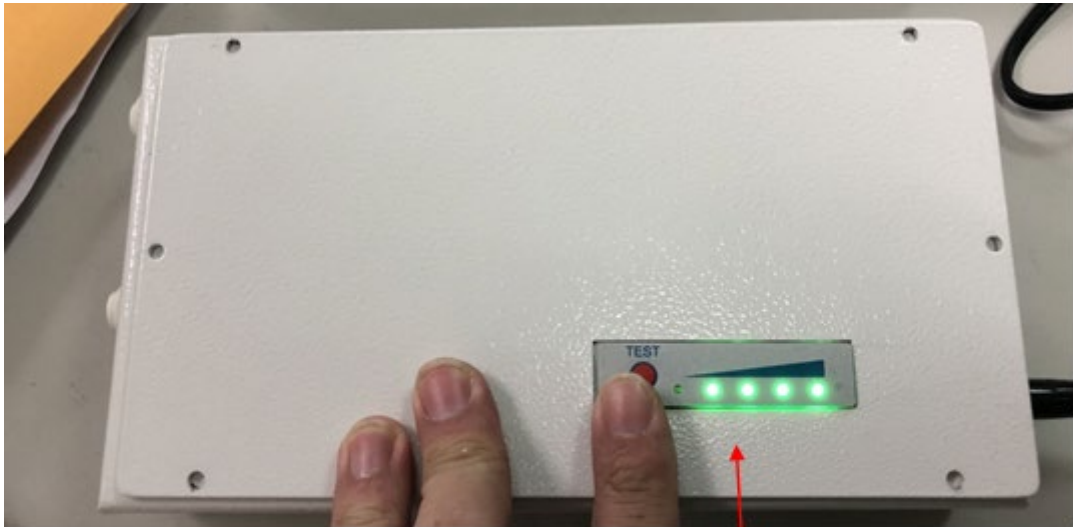


Battery Level Indicator

CLPx Pyrolyzer Complete View



If the CLPx pyrolyzer option (2-700-013) is ordered factory-installed, the pyrolyzer will arrive enabled. When adding the pyrolyzer option at a later time, order part # 2-700-013 and complete the following steps in service menu. Conversely, to disable the pyro option follow the steps in reverse.



1. Enter the CLPx main menu

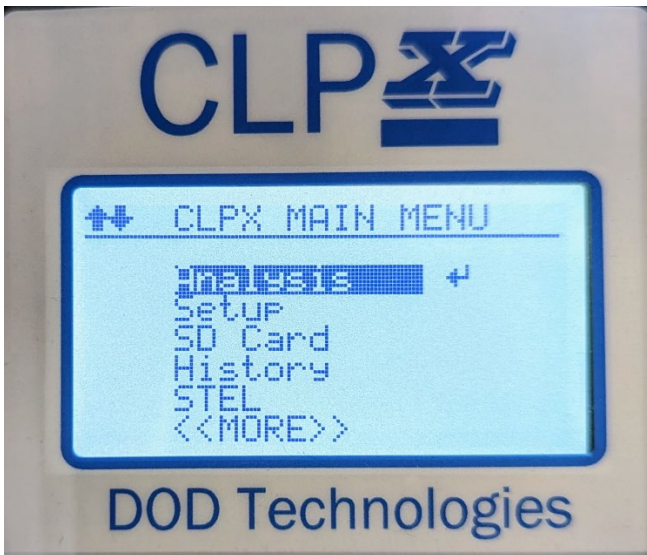


2. Scroll down and select 'Service'




3. Enter the user password, when prompted. The default password is '1234'.

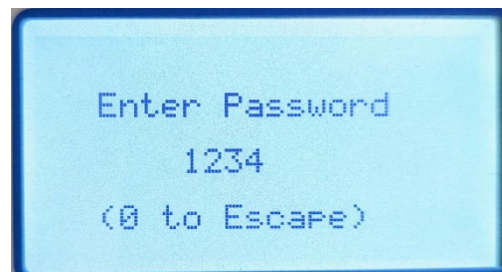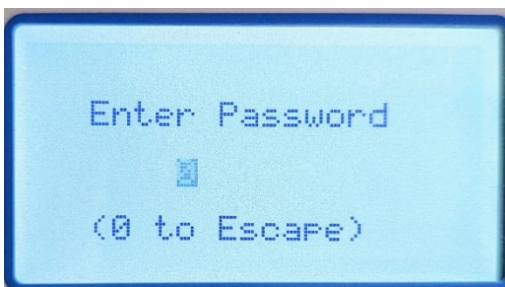


4. From the Service menu, scroll down to select 'Config Settings 2'

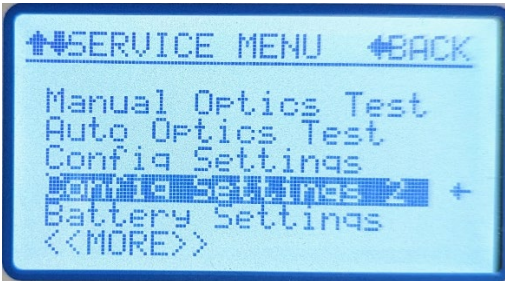



5. Scroll down to 'Pyro Enable' and ensure it is set to 'On'. Then scroll down to 'SAVE' and press enter.

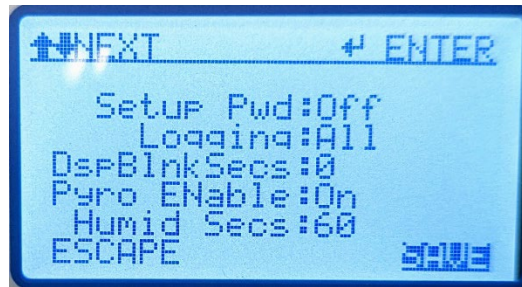

6. Return to Config Settings 2, back to the Main Menu and scroll down to select 'Service'.


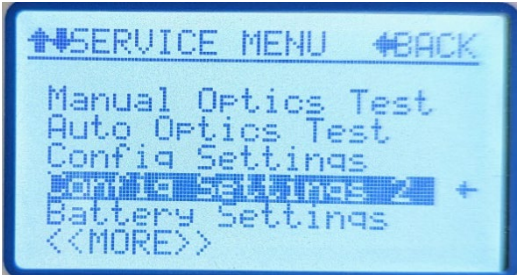


7. Scroll down and choose 'Select Gas Family' and then select 'Yes' to proceed.

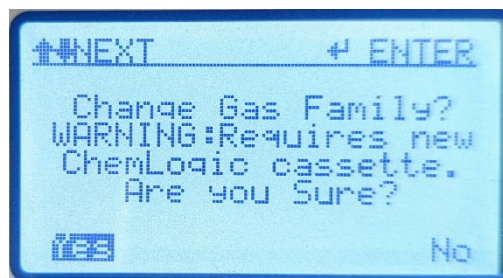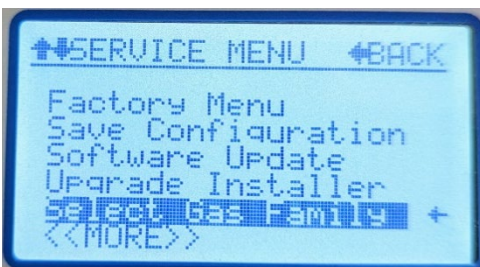


8. Under 'SELECT GROUP', scroll and choose 'Pyrolzer'. Then, select the pyrolyzer gas to be tested.


Note: NF3 is utilized as an example in the figure below.

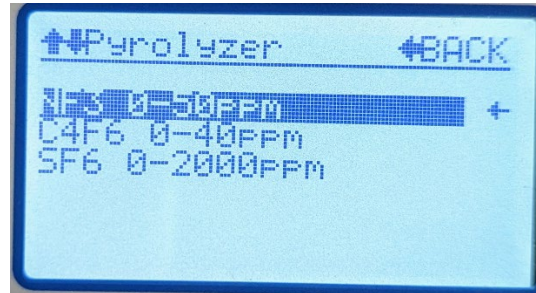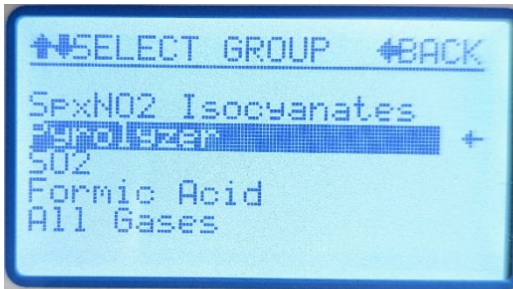


9. Select 'OK' after reviewing the pyrolyzer gas verification screen.

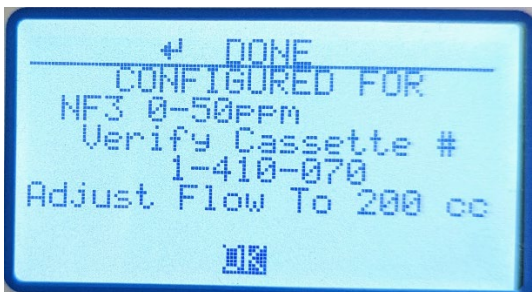


10. Review the pyrolyzer alarm levels and select 'SAVE'

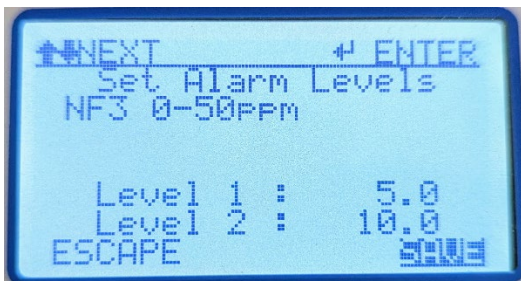


11. Back arrow to return to the service menu. Then back arrow again to return to the Main Menu.

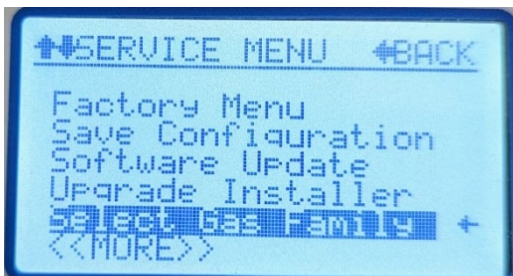


12. Scroll and select 'Analysis', press enter. Review the 'CONFIGURED FOR' screen and press 'OK'.

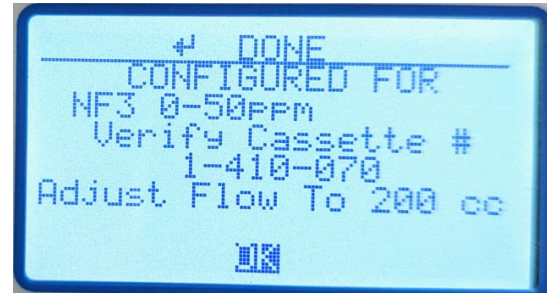

13. The analysis will cycle through the screen for 'VERIFYING OPTICS'.

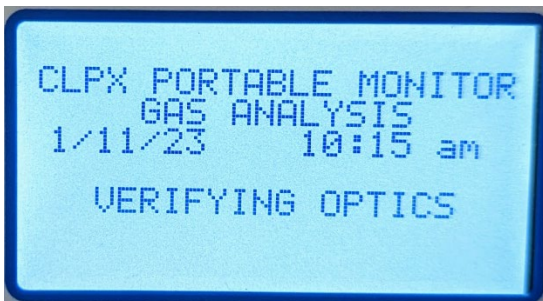

14. Configured gas will be noted and will request you verify the correct cassette is inserted.

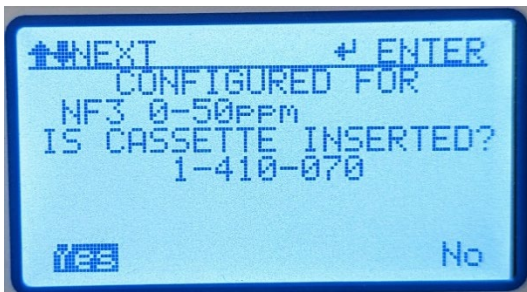

15. In analysis mode, the CLPx will display a screen similar to the following for pyrolyzer gas NF3.



Follow these steps in reverse when turning off the pyrolyzer option and select the appropriate gas family that does not require the pyrolyzer option.

Note: if a Gas family is selected that does not utilize the Pyrolyzer option a "Caution" message is displayed.



Note: The CLPx with the pyrolyzer option is shipped with the following caution label.

